

# BCi96D (BC296D/796D APCO CARD) UPDATE PROGRAM

=====

## Update Instructions

Thank you for rewriting of the BCi96D Firmware Update flash Ver x.xx\*.


\* x.xx means the version of the BCi96D Firmware Update Software.

1. Click here to download the updater program. Save this program to your computer, and install BCi96DVUP\_Vx\_xx by "setup.exe".
2. Connect your scanner to your PC using the standard PC interface cable.
3. Keep your scanner connected to external power until you complete this procedure.
4. Turn off the scanner. Then, hold down HOLD/MAN while you turn on the scanner. The scanner's display remains blank (this is normal).
5. Navigate to the file you downloaded in Step 1 and run the program. Follow the onscreen prompts to select the COM port and start the flash process. The PC will indicate the status of the update as it processes. The scanner's display remains blank. Once the update begins, it takes about 3 minutes for the transfer to complete.
6. When prompted, turn off the scanner and turn it back on. The update is complete.

=====

## Normal Operation


Click “ Start ” - “ Program ” - “ Uniden ” - “ BCi96D\_Vx\_xx ” on your PC.

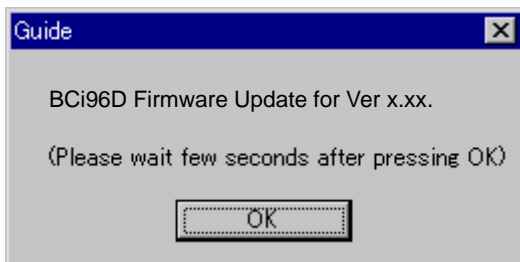

Click " OK " .



Click “ Comport (P) ” - “ Serial Port Option ” .

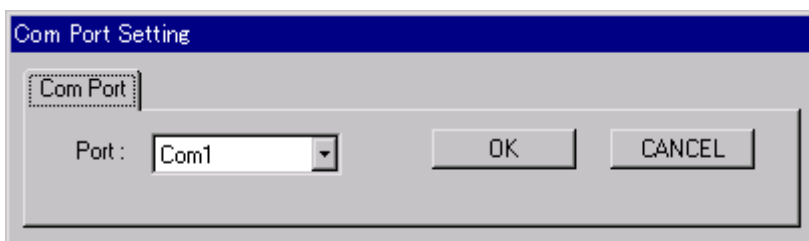


Select Port, and click “ OK ” .



Click " START " .



According to a guide, if ready, click "OK".

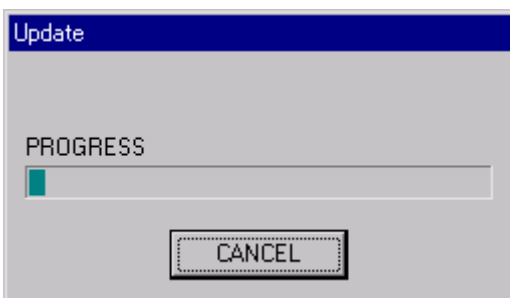

The update for about 3 minutes starts.



Click "OK".



Click "EXIT", "BCi96DVUP" will be ended.

# Illegal Operation

## Case 1



If OK is pushed when not ready according to the guide.

The following is displayed.




## Case 2



If OK is pushed when use already updated card.

The following is displayed.

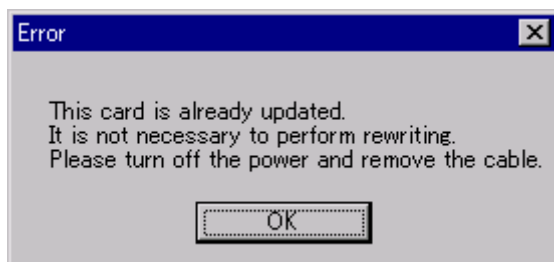


### Case 3




If OK is pushed when use another model. (Example Bci25D)

The following is displayed.

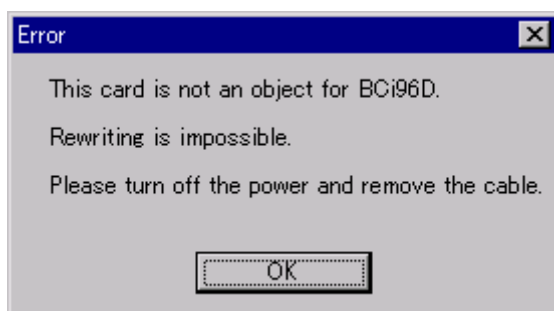

## Case 4

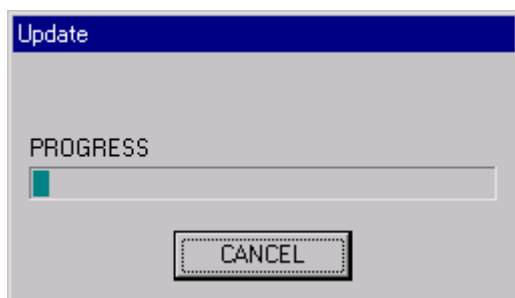

It becomes the next display, after update is completed in the middle of update, when a set is turned off.

