

PLACE
FIRST-CLASS
STAMP
HERE

Please do not send products or other
correspondence to this address.

039 Q

Uniden®
PRODUCT REGISTRATION DEPARTMENT
PO BOX 44486
DENVER CO 80201-4486
USA

Uniden®

PRODUCT REGISTRATION CARD

Complete the attached registration card and return today
to receive these 3 important benefits:

- **CONFIRM YOUR WARRANTY:**
Your prompt product registration confirms your right to the protection available under the terms and conditions of your Uniden warranty.
- **PROTECT YOUR PRODUCT:**
We will keep the model number and date of purchase of your new Uniden product on file to help you refer to this information when necessary.
- **HELP US DEVELOP NEW PRODUCTS:**
We value your input! Your responses will help us bring you new products specifically designed to meet your needs.

PLEASE FOLD AND SEAL WITH TAPE BEFORE MAILING. DO NOT STAPLE.

to the Power Save mode. The radio is still able to
receive transmissions in this mode.

LCD Backlight
The LCD Backlight will automatically turn ON when
any key (except the **PTT** button and **Power boost**
button) is pressed. The LCD display will illuminate
for 10 seconds before turning OFF.

Monitor Mode Feature
Your GMR1088-2CK radio allows you to listen for
weak signals on the current channel at the press of a
key.

- To turn ON the Monitor Mode:
- Press **mon** for brief listening, the **rx** icon will blink.
 - Press and hold **mon** for 2 seconds for continuous listening. The receiver circuit will stay open, and letting in both the noise and weak signals.

To turn OFF Monitor Mode:
Press **mon** to return to "Normal" mode, and the
rx icon stop blinking.

Roger Beep
Roger Beep is a BEEP that is sent to notify the end
of transmission (PTT, Power boost, and VOX
transmission). Roger Beep can be heard through
the speaker when key beep is on. Roger Beep is
transmitted even if key beep is turned off. However,
Roger Beep will not be heard from the speaker.

To turn ON Roger Beep:
Press and hold the **▲** key while turning ON the
radio.

To turn OFF Roger Beep:
Press and hold the **▲** key while turning ON the
radio.

play will change as the radio rapidly cycles through
the channels.

To turn OFF channel scan:
Press the **sel/◊** , **call**, **Power boost** button, **PTT**,
wx/alert key, or press and hold the **ch/scan** key for
2 seconds.

Silent Call Mode
When you turn on the silent mode, all incoming
calls are muted: the radio blinks the display
backlight and call icon to alert you to an incoming
call. If you do not respond to the call within 5
seconds, the backlight turns off, and the call icon
will continuous blink until there is no signal. If the
incoming call end in 5 seconds, the call icon
disappears from the display. Silent mode is
disabled for 15 seconds when you transmit,
receive, or press any other button.

- To set the silent mode:
- 1) Enter the Menu. Advance through the Menu until the silent indicator appears on the display. The current Silent mode status (OFF, ON) blinks on the display.
 - 2) To switch the Silent mode from the **oF** (OFF) to **on** (ON), press the **▲** key.
 - 3) Exit the Menu.

Note: To prevent unwanted silent alerts, be sure to
use a Sub code whenever you use the Silent mode
feature.
You can hear the received voice when you turn ON
channel scan and an active channel is detected
even during silent mode. However, the (silent indi-
cator) icon still appears.

Key Lock
To lock the keypad:
1) Enter the Menu. Advance through the Menu until
the **🔒** icon appears on the display. The current
Key Lock status **oF** (OFF) blinks on the display.
2) To switch the Key Lock mode from **oF** (OFF) to
on, press the **▲** key.
3) To confirm the setting, press the **sel/◊** key.
The radio returns to the "Normal" mode.

Note: If you exit the setting mode before confirming
your selection by pressing the **sel/◊** key, the key
Lock setting will be set to **oF** (OFF).

To unlock the keypad:
1) Press and hold the **sel/◊** key to turn the radio
OFF.
2) Press and hold the **sel/◊** key again to turn the
radio ON. The keypad is unlocked.

Automatic Power Save Feature
Your GMR1088-2CK radio has a unique circuit
designed to dramatically extend the life of the
batteries. If there is no transmission nor an
incoming call within 3 seconds, your radio switches

Note: When you press the **Power boost** button,
boost and **tx** icon appear on the display. The
radio will transmit Maximum power when a GMRS
channel is selected. After one minute past when
the boost transmission is established, the transmis-
sion stops automatically, and you will hear a boost
time out error tone.

Voice Operated Transmission
Your GMR1088-2CK radio is equipped with a user
selectable Voice Operated Transmitter (VOX) that
can be used for automatic voice transmissions. The
VOX feature is designed to be used with a headset
with a microphone. Transmission is initiated by
speaking into the remote microphone instead of
pushing the **PTT** button.

- To select the VOX level:
- 1) Enter the Menu. Advance through the Menu until the **vox** icon appears on the display. The current level (OFF, 1-3) will be indicated. Level **oF** (OFF) disables VOX, while levels 1-3 set the sensitivity of the VOX circuit.
 - 2) Press either the **▲** or **▼** key to the desired VOX sensitivity level. Use level 1 for increased sensitivity to voice in normally quiet environments, and use a higher level to reduce undesired activation in very noisy environments.
 - 3) Exit the Menu.


Transmitting a Call Tone
Your GMR1088-2CK radio is equipped with 5
selectable call tones that will be transmitted when
the **call** key is pressed.

- To select a call tone:
- 1) Enter the Menu. Advance through the Menu until the **call** icon is shown on the display. The current call tone number (1-5) will be indicated.
 - 2) Press the **▲** or **▼** key to increase or decrease the number to the desired call tone. Each tone will be heard through the speaker.
 - 3) Exit the Menu.

To transmit the selected call tone, press the **call**
key. The selected tone will automatically be
transmitted for a fixed length of time. Call Tone will
be cancelled when the **PTT** button or **Power boost**
button is pressed.

Channel Scan Feature
Your GMR1088-2CK radio has a channel scan
feature that allows you to easily scan all 22
channels. When an active channel is detected, the
radio will pause on that channel until the channel is
clear. Then after a 2 second delay, the radio will
continue scanning. Pressing the **PTT** button or
Power boost button while the scan is paused on a
channel will allow you to transmit on that channel.

To turn ON channel scan:
Press and hold the **ch/scan** key until the **scan...**
icon is displayed. The channel number on the dis-

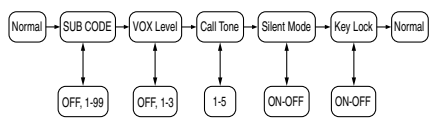

- 1) To enter the Menu, press the **sel/◊** key.
- 2) Additional presses of the **sel/◊** key will advance you through the Menu until exiting to "Normal" operating mode.
- 3) Other methods of exiting the Menu function are:
a. Press and hold the **sel/◊** key again.
b. Press the **PTT**, **Power boost** button, **mon**, **call**, **wx/alert**, or **ch/scan** key
c. Wait 10 seconds until the unit automatically returns to "Normal" mode.

Choosing a Channel
Your radio has 22 channels and 99 Sub codes you
can use to talk to others. In order to speak to
someone, each of you must set to the same
channel and Sub code.

To choose a channel:
With the radio in "Normal" operating mode press
the **ch/scan** key and press the **▲** or **▼** key to
increase or decrease the channel number
displayed.

Note: FRS channels 8-14 have an expectancy
range of up to 3 miles. GMRS channels 1-7, 15-22
have an expectancy range of up to 10 miles by
pressing the **Power boost** button. You can know
which GMRS or FRS channel is active by the icon.
The **📻** icon indicates GMRS channel, and the **📻**
icon indicates FRS channel.

Choosing a Sub Code
Each of the channels 1-22 may have any one of
the codes, OFF or 1-99 selected. Code **oF** (OFF)
indicates no Sub code selected and your radio can
receive a signal regardless of the code settings of
the transmitting radio.

- 1) Enter the Menu. The Sub code on the LCD display will appear.
- 2) Press the **▲** or **▼** key to increase or decrease the code number displayed. You can also select **oF** (OFF) at this stage.
- 3) Exit the Menu.

Talking on Your Radio
To talk to others using the radio:
1) Press and hold the **PTT** button and speak in a
clear, normal voice about 2-3 inches away from
the microphone. While you are transmitting, the
tx icon will appear on the display. To avoid
cutting off the first part of your transmission,
pause slightly after pressing the **PTT** button
before you start talking.
2) When you are finished speaking, release the **PTT**
button. You can now receive incoming calls. While
receiving, the **rx** icon will appear on the display.

4) Align the battery cover tabs with the GMR1088
tab holes then replace the cover clip.

**BATTERY LEVEL AND
LOW BATTERY ALERT**

This unit has a battery level meter on the display to
indicate the status of the batteries. When the battery in
the unit is low, the battery level meter icon **🔋** will flash.
Recharge the NiMH battery pack immediately or if you are
using the alkaline batteries, you must replace the alkaline
batteries in order to continue using the radio.

Warning! To avoid the risk of personal injury or property
damage from fire or electrical shock, only use the Uniden
accessories specifically designated for this product.

USING THE CHARGING CRADLE

If you use the rechargeable NiMH battery pack, two
GMR1088-2CK radios can be charged by using the
charging cradles.

**Make sure to turn the radio OFF before placing
the radio in the charging cradle. Otherwise the
battery level meter icon won't indicate properly.**

- 1) Connect the AC adapter (# AD-0001) to DC IN
9V jack and to a standard 120V AC wall outlet.
- 2) Set the charging cradle on the desk or tabletop,
and place the radio in the charging cradle with
the keypad facing forward.
- 3) Make sure that the LED illuminates. Charge the
battery pack for 16 hours and remove the radio
from the charging cradle after charge.

Note: The charge indicator LED will remain on as
long as the radios are left in the charger.

USING THE RADIO

In order to get the most out of your new radio, read this
reference guide completely before attempting to operate
the unit.

Turning the Radio On and Adjusting the Volume

- 1) Press and hold the **sel/◊** key to turn the radio ON,
and increase the speaker volume by pressing the **▲**
key. To decrease the volume, press the **▼** key.
- 2) Press and hold the **sel/◊** key again to turn the radio
OFF.

Adjusting the Sound (Key Beeps)

Your radio emits a beep each time one of the keys
(except for the **PTT**, **Power boost** button, and **call**
key) is pressed.
To turn this sound OFF, press and hold the **call** key while
turning ON the radio. Repeat this step to turn the sound ON.

Navigating through the Menu
To access the advanced features of the
GMR1088-2CK, your radio has a Menu function.

Congratulations on your purchase of the Uniden
GMR1088-2CK (General Mobile Radio Service)
radio. This product is a lightweight, palm-sized
radio. Use it at sporting events to stay in contact
with family and friends, hiking, skiing, outdoors, or
in a neighborhood watch for vital communication.
This compact, state-of-the-art device is equipped
with many features.

PACKAGE CONTENTS

Your package contains two GMR1088 radios, two
rechargeable NiMH battery packs (#BP38), two AC
adapters (#AD-0001), two Charging cradles
(#RC6489), two belt clips and this reference guide.
You may operate the unit using the rechargeable
NiMH battery pack or 4 AAA alkaline batteries
(not included). To order headsets, replacement
batteries, or other accessories, visit our website @
www.uniden.com or call 1-800-554-3988, Mon-Fri,
8 a.m. to 5 p.m. CST. **Use only Uniden accessories.**

- NiMH Battery Pack - #BP38
- Charging Cradle - #RC6489
- Headset - #HS2467

GMRS LICENSE

The GMR1088-2CK operates on General Mobile
Radio Service (GMRS) frequencies when using
Channels 1-7 and 15-22. You must have a GMRS
license issued by the Federal Communications
Commission to legally use these channels. For
licensing information and application forms, visit
the FCC online at: www.fcc.gov/wtb/uls or call
the FCC hotline at 1-800-418-3676. If you have
any questions, you can contact the FCC direct at
1-888-225-5322. No license is required for
operation on channels 8-14 or operation on any
channel in Canada.

INSTALL THE BATTERY

Your GMR1088-2CK radio uses the NiMH battery
pack or 4 AAA alkaline batteries (not included).

To install the NiMH battery pack:

- 1) Make sure your radio is OFF.
- 2) Release the battery cover clip, then remove the
battery cover.
- 3) Install the NiMH battery pack into the battery
compartment. Be certain to follow the instruction
written on the label on the battery pack.
Installing the battery pack incorrectly will prevent
the unit from operating.


GMR1088-2CK

- 15 GMRS / 7 FRS Channels
- 99 Sub Codes (CTCSS Tone and DCS Code)
- Up to 10 Mile Range*
- Internal VOX Circuitry
- Silent Call
- 5 Selectable Call Tone Alerts
- Backlit LCD Display
- Optional Headset Accessories
- Headset Jack
- Roger Beep
- Power Boost Button for Maximum Range
- Battery Charger
- Battery Level Meter
- Channel Monitor
- Channel Scan
- Keypad Lock
- NOAA Emergency / Weather Channels
- Emergency Weather Alert



*Range may vary depending on environmental and/or topographical conditions.

GMR1088 RADIO

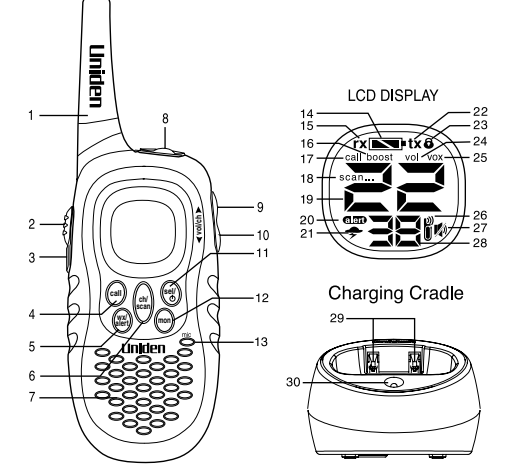

- | | |
|-----------------------------|-----------------------------|
| 1 Antenna | 16 Boost Indicator |
| 2 PTT (Push-To-Talk) Button | 17 Call Indicator |
| 3 Power Boost Button | 18 Scan Indicator |
| 4 Call Key | 19 Channel Indicator |
| 5 WX/Alert Key | 20 Alert Indicator |
| 6 Channel/Scan Key | 21 Weather Indicator |
| 7 Speaker | 22 Transmit Indicator |
| 8 Headset Jack | 23 Keypad Lock Indicator |
| 9 Volume/ch Up Key | 24 Volume Setting Indicator |
| 10 Volume/ch Down Key | 25 VOX Indicator |
| 11 On/Off/Select Key | 26 GMRS/FRS Indicator |
| 12 Monitor Key | 27 Silent Indicator |
| 13 Microphone | 28 Sub Code Indicator |
| 14 Battery Level Meter | 29 Charging contacts |
| 15 Receive Indicator | 30 Charging LED |

THANK YOU FOR PURCHASING A UNIDEN PRODUCT
CHECK OUT THE LATEST ACCESSORIES
www.uniden.com

GMRS 2-way radios

Please fill-out and return this card within 10 days!



039 Q

1 First name: _____ **Initial:** _____ **Last name:** _____
Address: (number and street) _____ **Apt number:** _____
City: _____ **State:** _____ **Zip code:** _____

2 E-mail address: (EXAMPLE: yourname@yourhost.com) _____

1. Yes! I want to receive offers or communications from Uniden via e-mail.
 2. Yes! I want to receive offers or communications that may interest me from other companies via e-mail. I understand this e-mail address may be shared with and/or combined with information from other sources.

3 Date of purchase: _____
 Month Day Year

4 Purchase Price: \$ _____ .00 (excluding tax)

5 Serial Number: (Located on the back of each unit)

 (Applies to FRS/GMRS only)

6 Model Number: (Example: GMRS540-2, WX500)

7 Which Uniden product did you purchase?
 1. FRS/GMRS Radio 2. Weather Radio

8 Store Name:

9 Check the two (2) most important reasons influencing your purchase of this Uniden Product:

1. <input type="checkbox"/> Uniden reputation	6. <input type="checkbox"/> Style/appearance
2. <input type="checkbox"/> Previous experience	7. <input type="checkbox"/> Warranty
3. <input type="checkbox"/> Features	8. <input type="checkbox"/> Received as a gift
4. <input type="checkbox"/> Value for price	9. <input type="checkbox"/> Other _____
5. <input type="checkbox"/> Quality/durability	

10 Check the two (2) most important features to you on this Uniden product:

1. <input type="checkbox"/> Range	6. <input type="checkbox"/> Color
2. <input type="checkbox"/> Low battery alert	7. <input type="checkbox"/> Design
3. <input type="checkbox"/> Clarity	8. <input type="checkbox"/> Channel scan
4. <input type="checkbox"/> Number of channels	9. <input type="checkbox"/> LCD backlight
5. <input type="checkbox"/> Auto squelch	

11 How did you first become aware of this product?

1. <input type="checkbox"/> Previous Use	7. <input type="checkbox"/> Recommendation of Salesperson
2. <input type="checkbox"/> Comparison Shopping	8. <input type="checkbox"/> Recommendation of Friend/Family
3. <input type="checkbox"/> In-Store Display	9. <input type="checkbox"/> Direct Mail
4. <input type="checkbox"/> Newspaper Ad	
5. <input type="checkbox"/> Magazine Ad	
6. <input type="checkbox"/> TV Ad	

12 Your gender: 1. Male 2. Female

13 Your marital status: 1. Married 2. Single

14 Date of your birth: _____
 Month Day Year

15 Including yourself, how many people live in your household?
 (Examples: 01, 02, etc.) Children (18 and younger) _____ Adults _____

16 Date of birth of children in your household 18 years of age and younger:

	Gender	Birth Date
	Male Female	Month Year
Child #1	1 <input type="checkbox"/> 2 <input type="checkbox"/>	____
Child #2	1 <input type="checkbox"/> 2 <input type="checkbox"/>	____

17 For your primary residence, do you:
 1. Own 2. Rent

18 Education: (Please check which category applies to you):

1. <input type="checkbox"/> Some high school	3. <input type="checkbox"/> College degree
2. <input type="checkbox"/> Completed high school	4. <input type="checkbox"/> Graduate degree

19 I/we buy these things through the mail, over the Internet, or from television:

	A. Mail	B. Internet	C. TV
1. Books/magazines	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2. Checks (not from a bank)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
3. Children's products	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4. Clothing	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
5. Computer products	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
6. Cosmetics/jewelry	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
7. Crafts/hobbies	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
8. Gardening supplies	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
9. Gifts	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
10. Housewares/furnishings	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
11. Insurance/financial products	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
12. Music/video/DVD	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
13. Sports equipment	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
14. Travel	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
15. Other	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

20 I/we have these credit cards:

1. <input type="checkbox"/> American Express/Diners Club	4. <input type="checkbox"/> Visa/MasterCard
2. <input type="checkbox"/> Discover	5. <input type="checkbox"/> Other
3. <input type="checkbox"/> Retail/Gas	6. <input type="checkbox"/> None

21 Someone in my home enjoys:

1. <input type="checkbox"/> Astrology	21. <input type="checkbox"/> Gourmet food/cooking
2. <input type="checkbox"/> Auto racing	22. <input type="checkbox"/> Grandchildren
3. <input type="checkbox"/> Automotive work	23. <input type="checkbox"/> Home decorating
4. <input type="checkbox"/> Books	24. <input type="checkbox"/> Hunting/shooting
5. <input type="checkbox"/> Camping/hiking	25. <input type="checkbox"/> Investing
6. <input type="checkbox"/> Casino gambling	26. <input type="checkbox"/> Lottery/sweepstakes
7. <input type="checkbox"/> Cigars	27. <input type="checkbox"/> Pets-cats
8. <input type="checkbox"/> Collecting	28. <input type="checkbox"/> Pets-dogs
9. <input type="checkbox"/> Computers/Internet	29. <input type="checkbox"/> Pets-other
10. <input type="checkbox"/> Cooking/recipes	30. <input type="checkbox"/> Photography
11. <input type="checkbox"/> Crafts/needlework	31. <input type="checkbox"/> Play sports
12. <input type="checkbox"/> Cultural art/events	32. <input type="checkbox"/> Self improvement
13. <input type="checkbox"/> Cycling	33. <input type="checkbox"/> Skiing/snowboarding
14. <input type="checkbox"/> Dieting/weight control	34. <input type="checkbox"/> Travel-Foreign
15. <input type="checkbox"/> Do-it-yourself	35. <input type="checkbox"/> Travel-U.S.
16. <input type="checkbox"/> Donating to charity	36. <input type="checkbox"/> Vacation cruises
17. <input type="checkbox"/> Fishing	37. <input type="checkbox"/> Vitamins/natural foods
18. <input type="checkbox"/> Fitness/exercise	38. <input type="checkbox"/> Wines
19. <input type="checkbox"/> Gardening	39. <input type="checkbox"/> Woodworking
20. <input type="checkbox"/> Golf	40. <input type="checkbox"/> Worship/Bible

USING THE WEATHER RADIO

Your GMR1088-2CK radio can receive weather broadcasts from the NOAA National Weather Service. When in the Weather Radio Alert mode, the system functions as it does in GMRS mode but also monitors the selected weather channel for alerts when not communicating. While using the Weather Radio, you are not able to receive GMRS/FRS communications.

- 1) To turn ON the Weather Radio Broadcast mode, press the **wx/alert** key. The icon appears on the display.
- 2) Press the **ch/scan** key, and press the **▲** or **▼** key to increase or decrease the number to the desired Weather Channel.
- 3) To exit the Weather Radio Broadcast mode, press the **wx/alert** key. The icon disappears from the display.

• To change the channel continuously, press and hold the **▲** or **▼** key for more than 1 second.

• When in the Weather Radio Broadcast mode, you can only set the Key Lock from the Menu mode.

Choosing an Emergency/Weather Channel

There are 7 NOAA channel frequencies available and these frequencies are common between the US and Canada. You will need to know what frequency is being transmitted in your location.

- 1) Press and hold the **wx/alert** key. The **alert** icon appears on the display.
- 2) When the unit receives a Weather Alert, it beeps for 5 seconds. The **alert** icon, the icon and channel indicator blinks.
- 3) To turn OFF Weather Alert, press and hold the **wx/alert** key. The **alert** icon disappears from the display.

• When Weather Alert is activated, the highest priority is given to this function. It checks the weather alert signals every 7 seconds and switches to the warning receive mode automatically.

• Weather Alert is activated even if key beep is turned off.

NOAA Weather Radio Frequency List

Channel 1 162.550 MHz	Channel 5 162.450 MHz
Channel 2 162.400 MHz	Channel 6 162.500 MHz
Channel 3 162.475 MHz	Channel 7 162.525 MHz
Channel 4 162.425 MHz	

SPECIFICATIONS

Channels 15 GMRS/7 FRS/7 Weather
 Sub Codes 38 Sub-Audible Tones / 61 DSC codes

Operating Frequency
 GMRS/FRS: 462.5500 - 467.7125 MHz
 WX: 162.4000 - 162.5500 MHz

Power Source NiMH Battery Pack (BP38) or 4 AAA Alkaline Batteries

Range Channels 8-14 up to 3 miles
 Channels 1-7, 15-22 up to 6 miles (10 miles with Power boost button)

Battery Life 22 Hours typ. - Alkaline Batteries (5/5/90 duty cycle) 17 Hours typ. - NiMH Battery Pack

Frequency Chart

Ch.	Freq.	Cross Ref.	Ch.	Freq.	Cross Ref.
1	462.5625	FRS & GMRS 1	12	467.6625	FRS 12
2	462.5875	FRS & GMRS 2	13	467.6875	FRS 13
3	462.6125	FRS & GMRS 3	14	467.7125	FRS 14
4	462.6375	FRS & GMRS 4	15	462.5500	GMRS 11
5	462.6625	FRS & GMRS 5	16	462.5750	GMRS 8
6	462.6875	FRS & GMRS 6	17	462.6000	GMRS 12
7	462.7125	FRS & GMRS 7	18	462.6250	GMRS 9
8	467.5625	FRS 8	19	462.6500	GMRS 13
9	467.5875	FRS 9	20	462.6750	GMRS 10
10	467.6125	FRS 10	21	462.7000	GMRS 14
11	467.6375	FRS 11	22	462.7250	GMRS 15

CTCSS Chart (Hz)

Code	Freq.	Code	Freq.
oF	OFF	20	131.8
1	67.0	21	136.5
2	71.9	22	141.3
3	74.4	23	146.2
4	77.0	24	151.4
5	79.7	25	156.7
6	82.5	26	162.2
7	85.4	27	167.9
8	88.5	28	173.8
9	91.5	29	179.9
10	94.8	30	186.2
11	97.4	31	192.8
12	100.0	32	203.5
13	103.5	33	210.7
14	107.2	34	218.1
15	110.9	35	225.7
16	114.8	36	233.6
17	118.8	37	241.8
18	123.0	38	250.3
19	127.3		

DCS Code List

Tone No.	Octal Code	Tone No.	Octal Code	Tone No.	Octal Code
39	23	61	152	83	343
40	25	62	155	84	346
41	26	63	156	85	351
42	31	64	162	86	364
43	32	65	165	87	365
44	43	66	172	88	371
45	47	67	174	89	411
46	51	68	205	90	412
47	54	69	223	91	413
48	65	70	226	92	423
49	71	71	243	93	431
50	72	72	244	94	432
51	73	73	245	95	445
52	74	74	251	96	464
53	114	75	261	97	465
54	115	76	263	98	466
55	116	77	265	99	503
56	125	78	271	-	-
57	131	79	306	-	-
58	132	80	311	-	-
59	134	81	315	-	-
60	143	82	331	-	-

REGULATORY INFORMATION

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Important: Changes or modifications to this unit not expressly approved by Uniden could void your authority to operate this unit. Your radio is set up to transmit a regulated signal on an assigned frequency. It is against the law to alter or adjust the settings inside the radio to exceed those limitations. Any adjustments to your radio must be made by qualified technicians.

- To be safe and sure:**
- Never open your radio's case.
 - Never change or replace anything in your radio except the batteries.

Your radio might cause TV or radio interference even when it is operating properly. To determine whether your radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by moving your radio away from the receiver. If you cannot eliminate the interference, the FCC requires that you stop using the radio.

Hazardous Environments: Do not operate the radio in hazardous environments. Explosion or fire may result. Do not operate the radio near unshielded electrical blasting caps. Under certain conditions, radios can interfere with blasting operations and may cause an explosion. Turn your radio OFF to prevent accidental transmission when in a blasting area or in areas posted: "Turn off two-way radio." Construction crews often use remote control RF devices to set off explosives.

Care and Safety: To clean the radio, use a soft cloth dampened with water. Do not use cleaners or solvents because they can harm the body of the unit and leak inside, causing permanent damage. Use a dry, lint-free cloth to clean the battery contacts. Do not submerge the unit in water. If the unit gets wet, turn it off and remove the batteries immediately. Dry the battery compartment with a soft cloth to minimize potential water damage. Leave the battery compartment cover off overnight to ensure complete drying. Do not use the radio until the unit is completely dry.

RF EXPOSURE INFORMATION

WARNING! Read this information before using the radio. In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of the radio complies with the FCC guidelines and these international standards. Never allow children to operate the radio without adult supervision and the knowledge of the following guidelines.

WARNING! It is up to the user to properly operate this radio transmitter to insure safe operation. Please adhere to the following:

Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the radio, or result in violation of FCC regulations. Do not use the radio with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for a replacement antenna.

Body-worn Operation
 This device was tested for typical body-worn operations using the supplied belt-clip. To maintain compliance with FCC RF exposure requirements, Body-worn operations are restricted to the supplied belt-clip. For hand-held operation, the radio should be held 1 inch from the user's face. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

For more information about RF exposure, please visit the FCC web site at www.fcc.gov.

ONE YEAR LIMITED WARRANTY

Important: Evidence of original purchase is required for warranty service. WARRANTOR: UNIDEN AMERICA CORPORATION ("Uniden") ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials and craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate and be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is: (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, sub-assemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit and return it to you without charge for parts, service, or any other cost (except shipping and handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit. THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE AND ENTIRE WARRANTY PERTAINING TO THE PRODUCT AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OVERPAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you. **LEGAL REMEDIES:** This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty

is void outside the United States of America and Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product and separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts and accessories originally packaged with the Product. Include evidence of original purchase and a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor:

Uniden America Service
 4700 Amon Carter Blvd. Fort Worth, TX 76155
 (800) 297-1023, 7:00 a.m. to 7:00 p.m. CST,
 Monday through Friday: 9:00 a.m. to 5:00 p.m. CST,
 Saturday, Sunday and Holidays
 (except Thanksgiving and Christmas).
www.uniden.com

Covered under one or more of the following U.S. patents:
 4,684,870 4,734,049 5,203,015 5,214,789
 5,491,745 5,497,508 5,517,677 5,557,606
 5,574,994 5,610,946 5,613,201 5,625,870
 5,627,876 5,628,059 5,634,196 5,634,205
 5,678,176 5,697,096 5,717,312 5,722,070
 5,787,345 5,901,341 6,021,326 6,084,861
 6,163,691 6,195,415 6,353,730



Thank you for completing this questionnaire. Your answers will help us and other companies reach you with offers that may interest you. If you prefer not to receive these offers, please check here [].

PLEASE FOLD AND SEAL WITH TAPE BEFORE MAILING. DO NOT STAPLE.