

# UDR777HD

## VIDEO SURVEILLANCE SYSTEM

### QUICK START GUIDE

*This Quick Start Guide provides basic installation and setup procedures. For full details on UDR777HD system operations, go to [www.uniden.com](http://www.uniden.com) and download the detailed UDR777HD User Manual.*

#### WHAT'S IN THE BOX

- UDR777 Monitor
- Camera with Stand
- 5V 2A Power Adapter (Monitor)
- 3.7V 2000mA battery
- 9V 600mA Power Adapter (Camera)
- Ethernet (RJ45) Cable
- 8GB SD Card
- Mounting Hardware
- Quick Start Guide
- Antenna (May be attached to camera)

***If any items are missing or damaged, visit [www.uniden.com](http://www.uniden.com) for assistance. Never use damaged products!***

***Need help? Get answers 24/7 at our website: [www.uniden.com](http://www.uniden.com).***

#### MOINTOR SETUP

1. Unscrew the 2 screws on the battery compartment cover, remove the cover, and insert the battery. Replace the battery cover.
2. Flip out the stand on the back of the monitor and position the antennas.
3. Connect the 5V AC adapter to the power input on the rear of the monitor. Connect the other end of

the adapter to a 120 volt AC (standard indoor) power outlet.

***The monitor comes with a partial charge. Plug it in and let it charge for a full 8 - 9 hours before using it without the power cable attached.***

4. Press and hold the **POWER** button on the top of the monitor for 3 - 4 seconds to power it up.
5. The monitor displays the *Uniden Guardian* screen for a few seconds and then transitions to the Live view.

***The screen remains dark until the cameras are powered up.***

#### CAMERA SETUP


When you are positioning the camera, bring the monitor along; it's much easier to get the camera into the right position when you have the display handy.

***The monitor's battery will last approximately 2 hours on its own.***


1. Mount the camera and plug it into a power source. Check the video on the monitor. Reposition the camera for the best viewing angle, then disconnect it from the power source.
2. Hold the base of the camera stand where you want to mount it and mark the location of the screw holes.
3. Use the included screws and anchors to attach the stand.
4. Ensure the camera is securely in place, then reconnect it to power.

#### INITIAL SCREEN

Once your cameras and monitor are set up, the monitor displays Live view from the cameras. It can display up to 4 cameras.

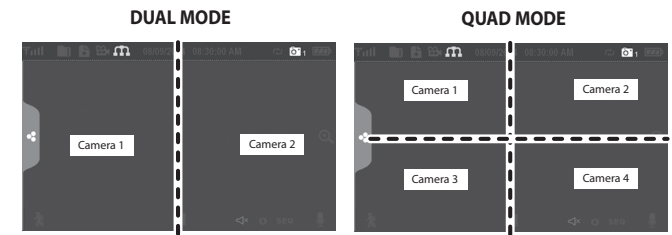


#### SCREEN ICONS

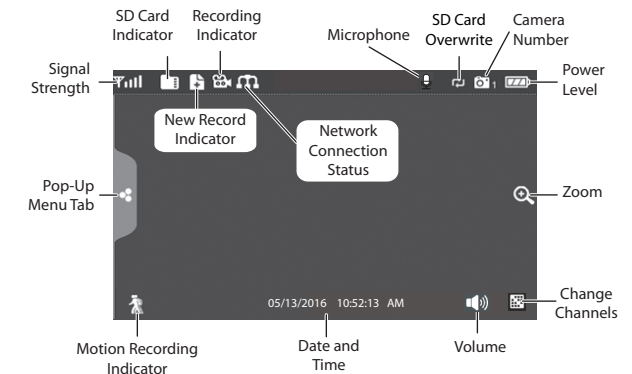

NOTE: Icons on the screen display in BLUE. Icons that display will vary according to system configuration.

#### USING THE UDR777HD

Set UDR777HD configuration and functions through the pop-out tabs on the left-hand side of the screen. Tap on the tab and the pop-out menus display.

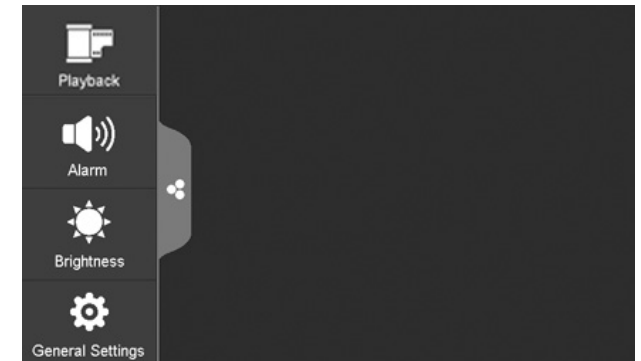

## POP-OUT MENUS

POP-OUT MENU	FUNCTION/SUB-MENUS
Playback	View, play, and delete recorded files.
Alarm	Set the alarm volume.
Brightness	Set the screen brightness. (Single mode only)
General Settings	<ul style="list-style-type: none"><li>• Camera Setup</li><li>• Recording Setup</li><li>• System Settings</li><li>• Motion Detection Settings</li><li>• Network Setup</li><li>• Firmware Upgrade</li></ul>

Go to [www.uniden.com](http://www.uniden.com) for the online detailed UDR777HD User Manual.

## COMPLIANCE INFORMATION

### RF Exposure Information

The antenna used for this transmitter must be installed to provide a separation distance of at least 20 cm (7.9") from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.

### FCC Part 15 Compliance

This device complies with Part 15 of the FCC rules. Operation is subjected to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Avis de conformité à la FCC : Ce dispositif a été testé et s'avère conforme à l'article 15 des règlements de la Commission fédérale des communications (FCC). Ce dispositif est soumis aux conditions suivantes: 1) Ce dispositif ne doit pas causer d'interférences nuisibles et; 2) Il doit pouvoir supporter les parasites qu'il reçoit, incluant les parasites pouvant nuire à son fonctionnement.

Tout changement ou modification non approuvé expressément par la partie responsable pourrait annuler le droit à l'utilisateur de faire fonctionner cet équipement.

### IC Compliance

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may

not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Cet appareil est conforme aux normes RSS exemptes de licences d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférences nuisibles et (2), il doit pouvoir accepter les interférences, incluant celles pouvant nuire à son fonctionnement normal.

Tout changement ou modification non approuvé expressément par la partie responsable pourrait annuler le droit à l'utilisateur de faire fonctionner cet équipement.

## One-Year Limited Warranty

**Important: Evidence of original purchase is required for warranty service.**

WARRANTOR: Uniden America Corporation ("Uniden") ELEMENTS OF WARRANTY: Uniden warrants, for one year, to the original retail owner, this Uniden Product to be free from defects in materials & craftsmanship with only the limitations or exclusions set out below.

WARRANTY DURATION: This warranty to the original user shall terminate & be of no further effect 12 months after the date of original retail sale. The warranty is invalid if the Product is (A) damaged or not maintained as reasonable or necessary, (B) modified, altered, or used as part of any conversion kits, subassemblies, or any configurations not sold by Uniden, (C) improperly installed, (D) serviced or repaired by someone other than an authorized Uniden service center for a defect or malfunction covered by this warranty, (E) used in any conjunction with equipment or parts or as part of any system not manufactured by Uniden, or (F) installed or programmed by anyone other than as detailed by the owner's manual for this product.

STATEMENT OF REMEDY: In the event that the product does not conform to this warranty at any time while this warranty is in effect, warrantor will either, at its option, repair or replace the defective unit & return it to you without charge for parts, service, or any other cost (except shipping & handling) incurred by warrantor or its representatives in connection with the performance of this warranty. Warrantor, at its option, may replace the unit with a new or refurbished unit.

THE LIMITED WARRANTY SET FORTH ABOVE IS THE SOLE & ENTIRE WARRANTY PERTAINING TO THE PRODUCT & IS IN LIEU OF & EXCLUDES ALL OTHER WARRANTIES OF ANY NATURE WHATSOEVER, WHETHER EXPRESS, IMPLIED OR ARISING BY OPERATION OF LAW, INCLUDING, BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THIS WARRANTY DOES NOT COVER OR PROVIDE FOR THE REIMBURSEMENT OR PAYMENT OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow this exclusion or limitation of incidental or consequential damages so the above limitation or exclusion may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, & you may also have other rights which vary from state to state. This warranty is void outside the United States of America & Canada.

PROCEDURE FOR OBTAINING PERFORMANCE OF WARRANTY: If, after following the instructions in the owner's manual you are certain that the Product is defective, pack the Product carefully (preferably in its original packaging). Disconnect the battery from the Product & separately secure the battery in its own separate packaging within the shipping carton. The Product should include all parts & accessories originally packaged with the Product. Include evidence of original purchase & a note describing the defect that has caused you to return it. The Product should be shipped freight prepaid, by traceable means, to warrantor at:

Uniden America Service  
C/O Saddle Creek  
743 Henrietta Creek Rd., Suite 100  
Roanoke, TX 76262

© 2016 Uniden America Corporation  
Irving, Texas

Issue 1, May 2016

Information in this document is subject to change without notice.